



## Installation guide for opening limiter


### SUPPLIED PIECES :

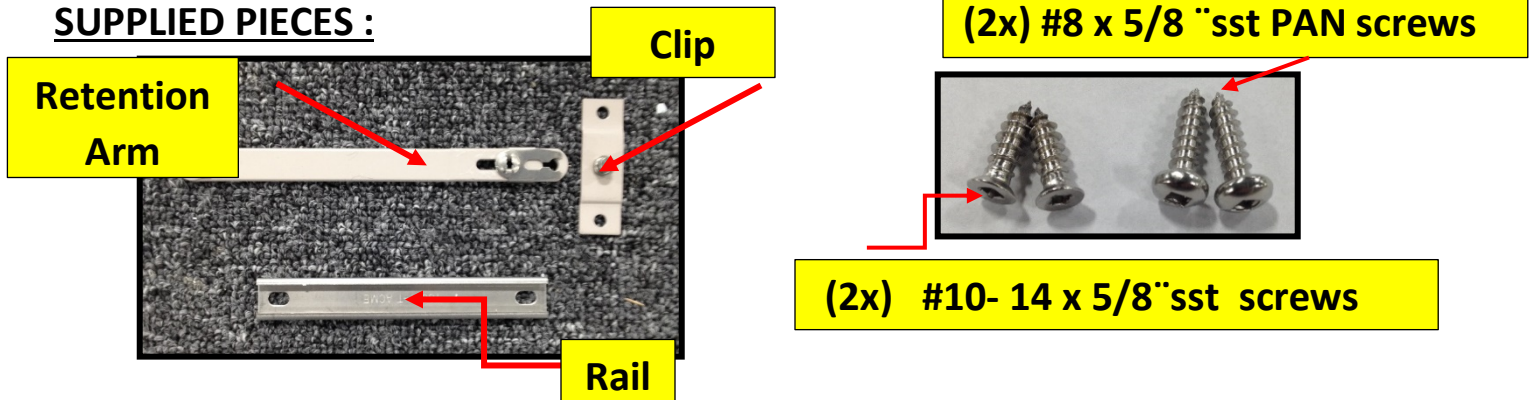


1. Drill a new water evacuation hole under the sash. (side opposite to hinges)

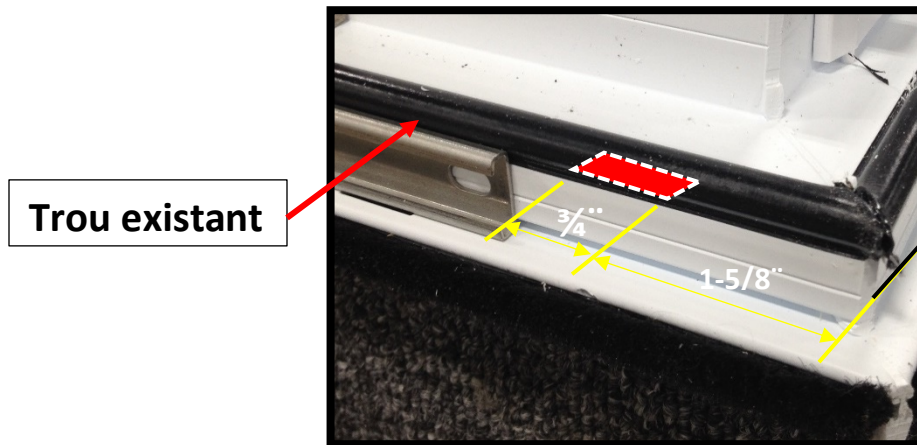


2. Position the rail on the side opposite to the hinges of the sash.

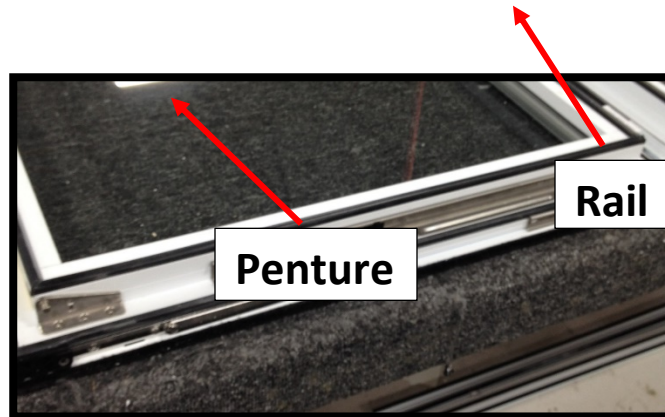

3. Fix the rail at a distance of 2- 1/2" (63 mm) from the corner of the sash with the help of the **# 8 x 5/8" Pan. screws (round tip)** \*(See step #3 before screwing)

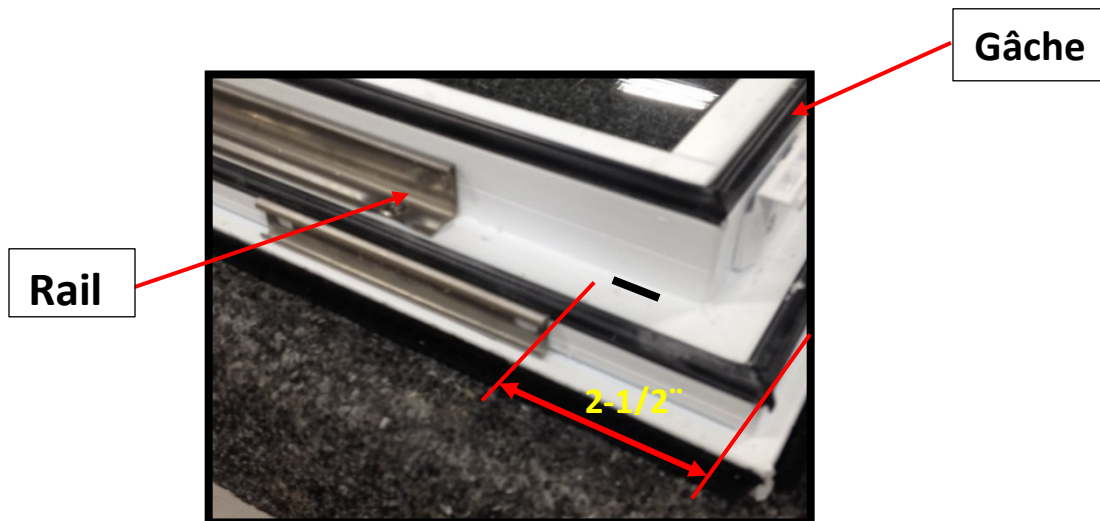

- It is important to engage the retaining arm inside the rail before putting on the second screw on the rail

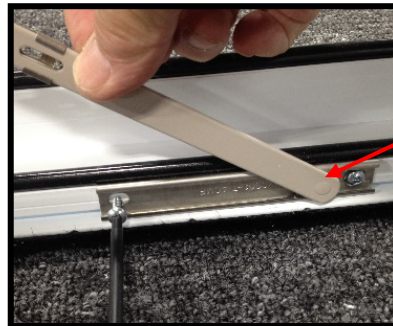

Bras

- Position the limiter clip on the bottom corner on the multi-point side.

**\*Use the #10-14 x5/8" sst screws**

- Finally fix the retention arm on The clip and slide the closer

