

DIMENSIONS

PORTES | FENÊTRES

Brickmould installation guide (TPVC)

Supplied pieces




Tube of Silicone



- #8 x 1/2" Pan screws pour PVC BM

Steps for installation

1. Apply a sealant joint around the perimeter, in the groove under the PVC BM as shown in the diagram below..

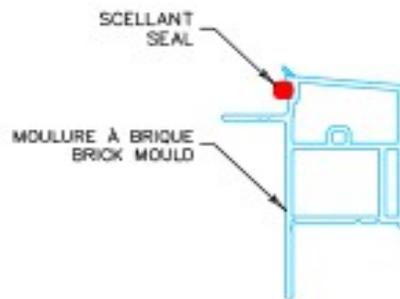

The application of the sealant under the M.A.B is the most important step in order to prevent any water infiltration.


DIMENSIONS

PORTES | FENÊTRES

Steps for installation (continued)

2. Install the Brickmould on the window. Firmly press the brick moulding on the frame and screw it in place. (Space the screws at 12" \pm c/c) It is advisable to have a slight overflow on the outside. Then clean off the excess.


Always make sure that the BM is well supported on the frame before screwing.

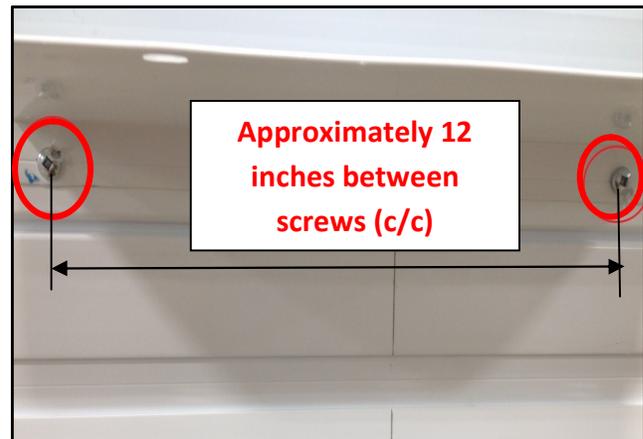

DIMENSIONS

PORTES | FENÊTRES

- ❖ **Important** on a modular PVC window (2 sections or more) a sealant joint of 3" ± must be applied to the frame at the junction of the exterior couplers before installing the BM. (see picture #1 and #2)
- ❖ **Important** the couplers must be cut flush with the BM before it is installed on the frame. (The couplers must not be installed below the BM) Finally, wipe up the sealant overflow on the outside.

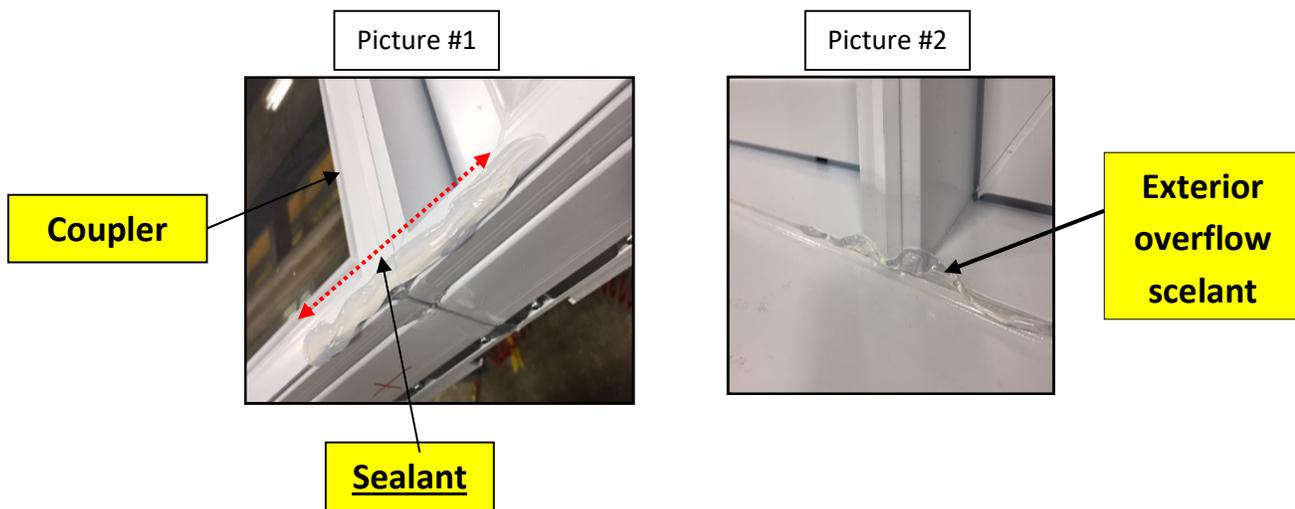

- **In the event of non-compliance with the installation procedure, no guarantee can be applied.**