

DIMENSIONS

PORTES | FENÊTRES

Brickmould installation guide (aluminum)

Supplied pieces




Tube of Silicone



- #6-20 x 1/2" camtap Screws

Steps for installation

1. Apply sealant in the groove under the Brickmould as shown on the diagrams. (Brickmould : 3/4" or 1-1/2")

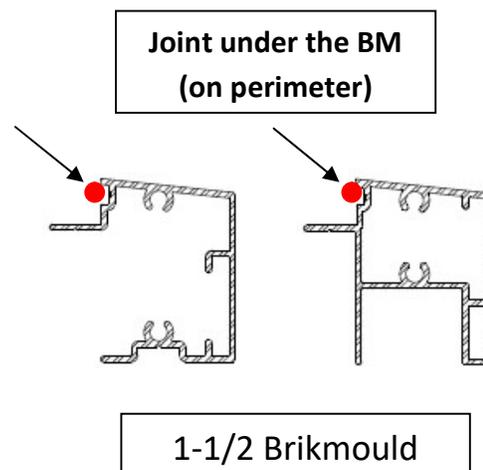


DIMENSIONS


PORTES | FENÊTRES

2. Install the Brickmould on the window and press well before screwing to the perimeter. (Space screws 12" \pm c/c)

Firmly press on the frame before screwing.

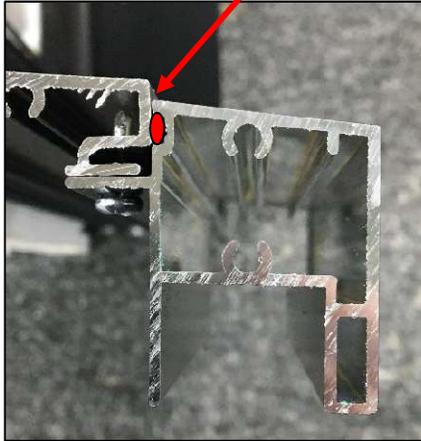


This picture is for reference only shows with TPVC frame.

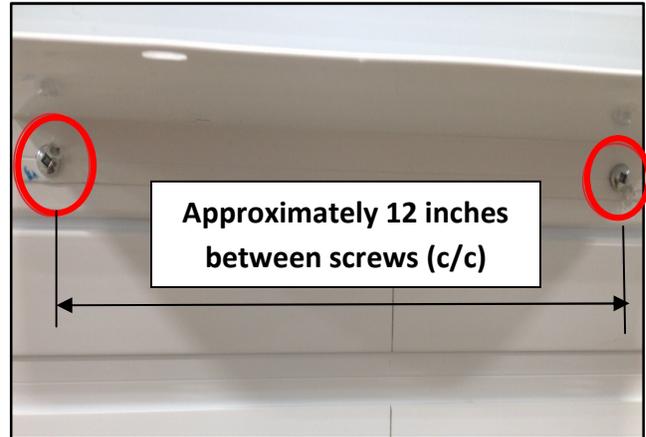

3. Finally an additional joint must be applied on the outside. (sill, head and sides)

Exterior Joint

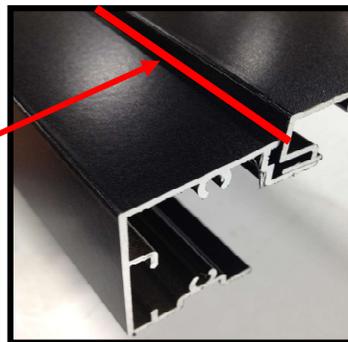

In the event of non-compliance with the installation procedure, no guarantee can be applied.