


DIMENSIONS

PORTES | FENÊTRES

Frame extension installation guide

Supplied pieces

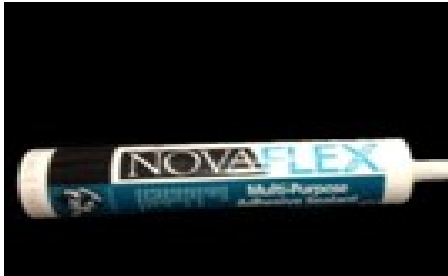

Tube of silicone




(12 x) #8 x 2 1/2 "r.w screws



#8 x 1/2" Pan screws

1. Insert the extension into its groove. Position the sides and then the top and bottom.

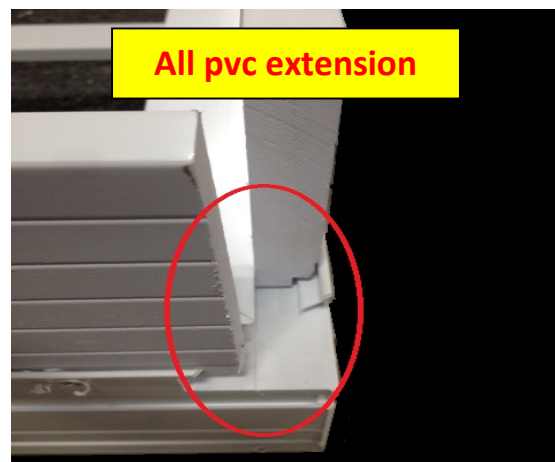

2. Screw the extensions corners (90°) with #8 x 2-1/2" (round washer).





DIMENSIONS

PORTES | FENÊTRES

3. Screw the extension to the perimeter of the frame.

*** Make sure the extension is snug against the bottom of the frame before screwing it on. (A sliding clamp can be used to ensure that the extension is well supported)**

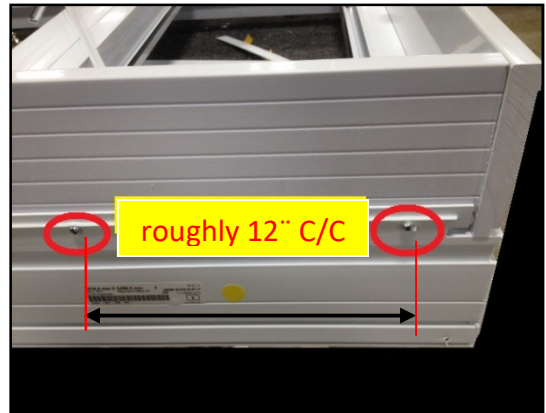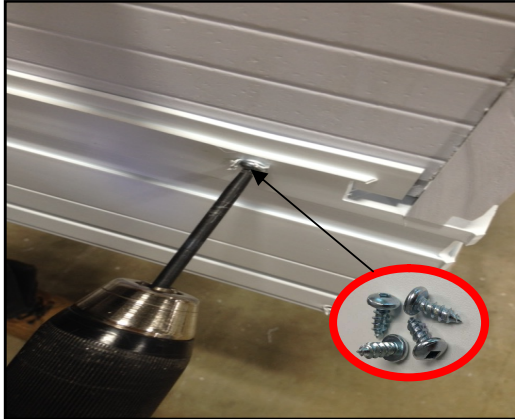

4. Seal the (4) corners of the extensions.

