

# GUIDE FOR INSTALLING THE JAMB PROTECTION KIT

## MATERIALS INCLUDED IN THE KIT


The jamb protection kit includes:

- 2 lengths of 76" jamb protection, trimmable 9 3/4"
- 4 retaining moldings of 6"

## INSTALLATION

Insert the 6" retaining moldings into the back of the compression weather-stripping. They must be positioned between the weather-stripping and the exterior sheathing.

Install two retaining moldings on each side to allow for the proper insertion of the jamb protectors.

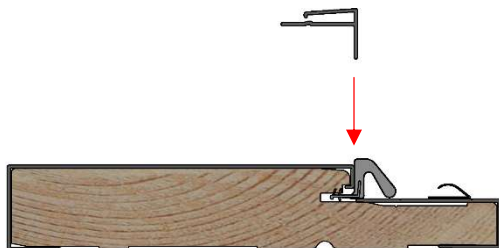

The jamb protectors are pre-cut for a 9 3/4" jamb. They can be trimmed and include visible cutting lines for easy adjustment to fit 9 1/4", 8 5/8", and 7 1/4" jamba. If necessary, cut using an X-Acto knife.

Then, simply insert the jamb protectors into the retaining moldings on each side.

