


DIMENSIONS

PORTES | FENÊTRES

Installation guide for opening limiter (LO-100)

(Casement Window)


Supplied pieces

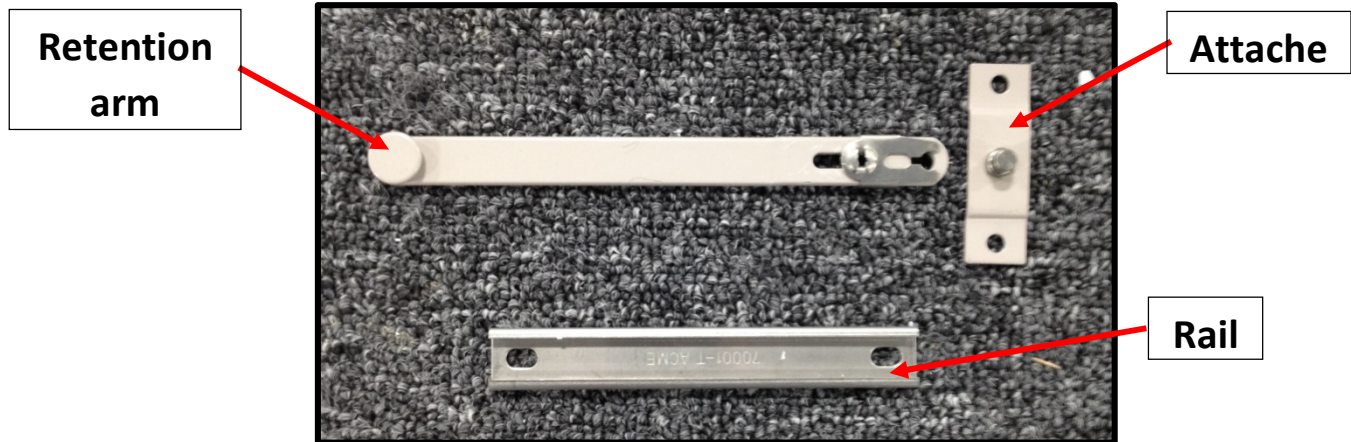

DIMENSIONS

PORTES | FENÊTRES

1. Drill a new water drainage hole under the sash. (opposite side of hinges)

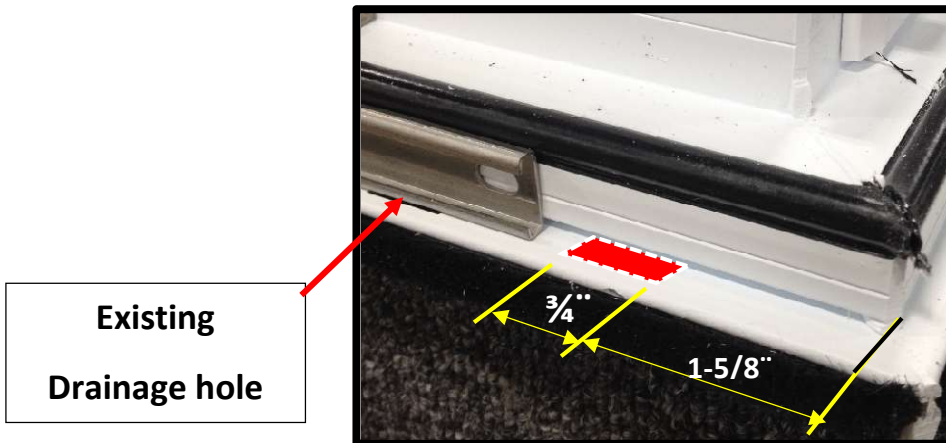


2. Position the rail on the opposite side of the sash hinges.



DIMENSIONS

PORTES | FENÊTRES

3. Fasten the rail at a distance of 2-1/2" (63 mm) from the corner of the sash using the # 8 x 5/8" Pan.(round head) screws * (see step #3 before screwing)

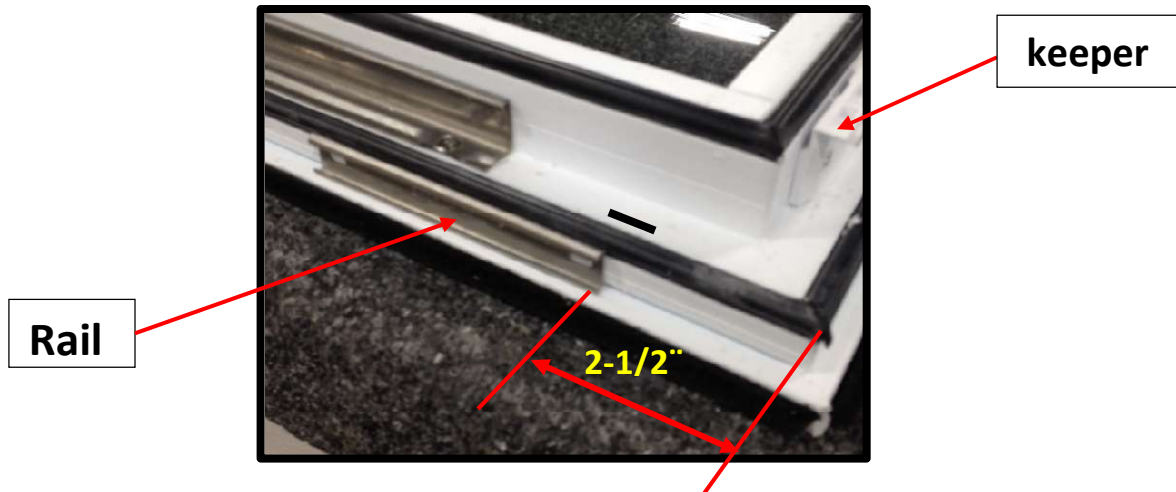

4. It is Important to engage the retaining arm inside the rail, before screwing the second screw on the rail.



DIMENSIONS

PORTES | FENÊTRES

5. Position the limiter attachment in the lower corner of the side of the multi-point lock.

***Use the #10-14 x5/8" sst screws**



6. Finally, attach the retaining arm to the clip and slide the clip.

