


DIMENSIONS

PORTES | FENÊTRES

Thermos installation guide

In the event of non-compliance with the assembly procedure, no warranty can be applied.

Supplied pieces

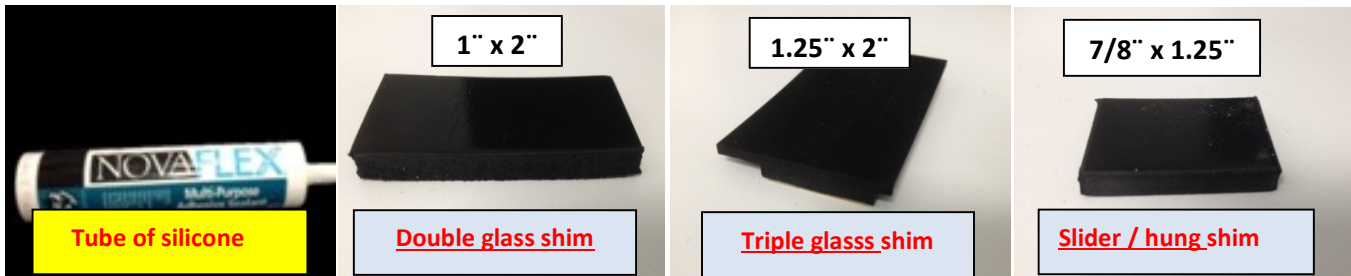

Installation steps

1. Apply sealant to the (4) corners (fixed or sash) at the junction of black coex or white self-adhesive tape depending on the type of window.



Casement (fixed /operator)



Slider / Hung


2. Installation of shims, see diagram below

DIMENSIONS


PORTES | FENÊTRES

Never block the water drainage holes.

Shims for casement sash

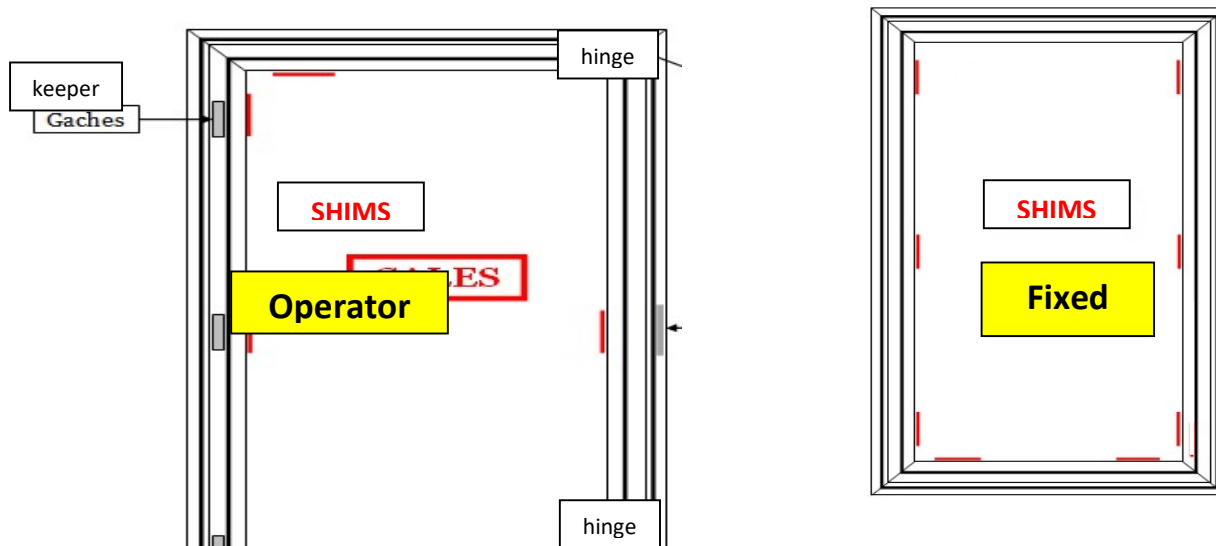

Shims for Sider/Hung sash (Important to remove the protector on the sticker before installing the thermos)

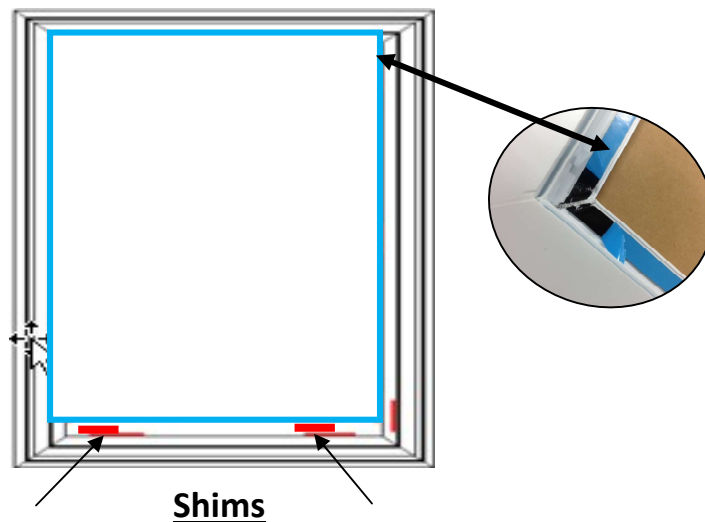


DIMENSIONS

PORTES | FENÊTRES


3. Install the thermos by resting it on the bottom shims.





4. It is important to apply sealant at the bottom in a "U" pattern before installing the glazing retaining moulding. (Casement only : fixed and operator)

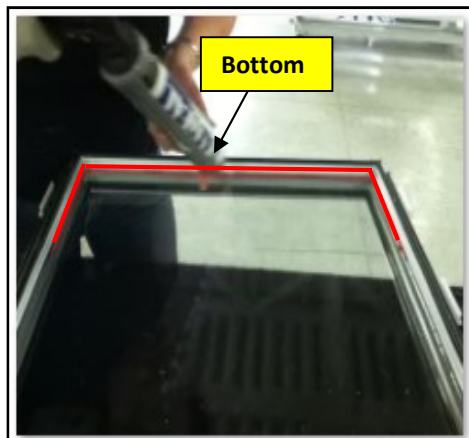

6" min.

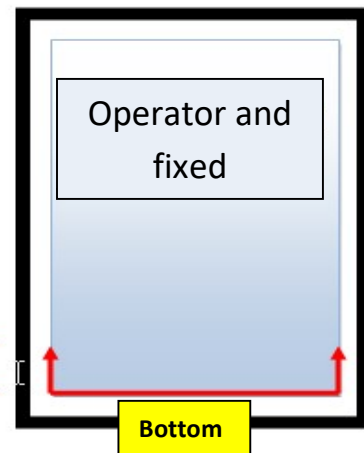

5. Install the retaining moulding.

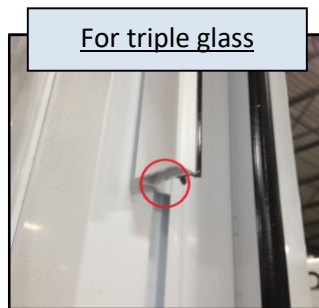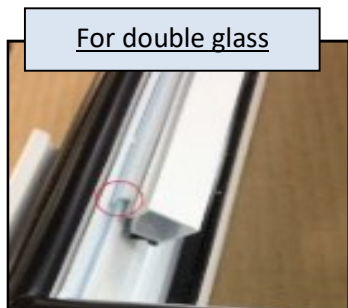

- Retaining moulding: Install the vertical pieces and finally the horizontal pieces.